



KOKATAT SeaO₂ HYBRID INFLATABLE LIFE VEST: MANUAL INFLATOR RE-ARMING INSTRUCTIONS

1. Access manual inflator via open slot behind large pocket and locate manual inflator.

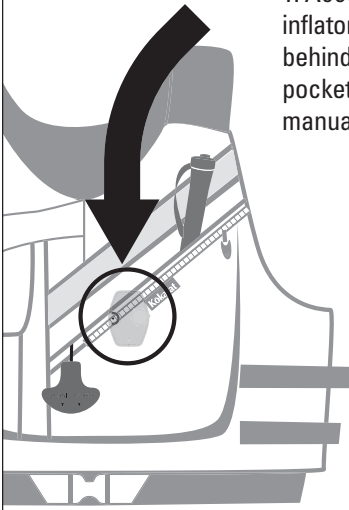


2. If manual inflator does not contain CO₂ cylinder, skip to step 3. If used CO₂ cylinder is attached, remove by rotating the cylinder counter-clockwise (remember: righty-tighty, lefty-loosey) and place used cylinder in steel recycling. Prior to recycling or discarding spent cylinder, look into threaded end making sure cylinder has been punctured. If cylinder has not been punctured, it is still filled with compressed CO₂.

Do not recycle or discard a filled cylinder!

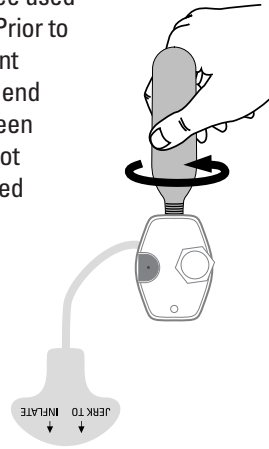


Empty CO cylinders purchased from Kokatat are recyclable.


3. Rotate manual inflator lever to its closed position within the inflator body and carefully insert new green indicator pin in hole located on face of inflator.

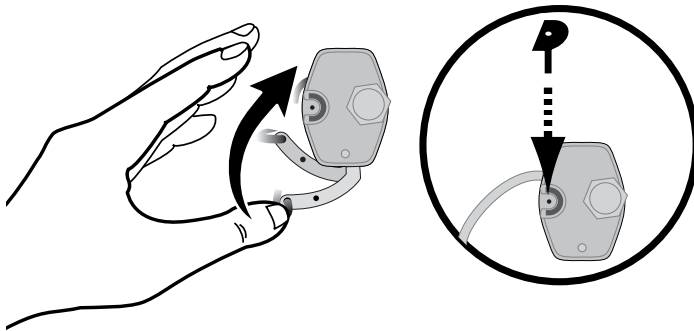


4. Look into threaded cylinder receiver and view the 3/8" gasket. If damaged or missing, contact Kokatat for replacement (item number 849AM, 3/8" receiver gasket).

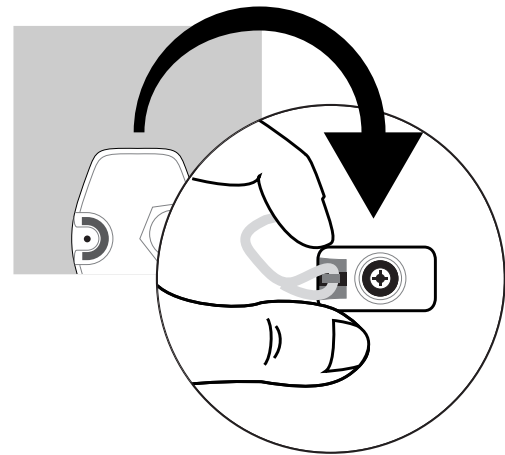

5. Carefully thread new 16 gram filled CO₂ cylinder into cylinder receiver, rotating in clockwise direction. Make sure fit is snug, but **DO NOT OVERTIGHTEN!**

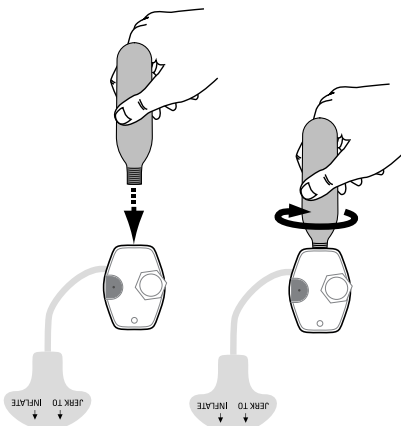

6. Gently return re-armed manual inflator into its original position inside front bladder cover, making sure yellow pull tab labeled "jerk to inflate" is hanging out of small opening adjacent to main pocket.

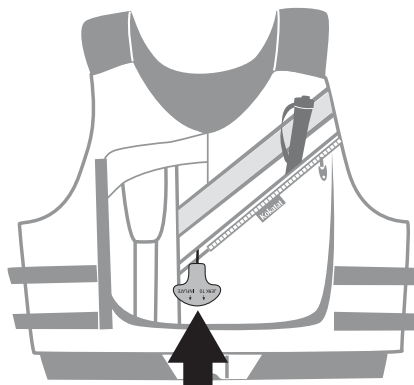

BEFORE EACH EXCURSION

Make sure green indicator pin is locked in place signifying a filled CO₂ cylinder (indicating manual inflator is operational).